

FLASH *BLU* 30™



Kanguru Flash Blu30™ Quick Start Guide

iStorage provides the following helpful resources:

• website: www.istorage-uk.com • email: support@istorage-uk.com • Telephone: +44 (0) 20 8991 6260

iStorage Technical Support Specialists are available from 9:00 a.m to 5:30 p.m GMT, Mon - Fri.

Quick Start Guide

Thank you for purchasing the Kanguru Flash Blu30™ USB 3.0 flash drive with a built-in physical write-protect toggle switch that provides an extra layer of security by allowing users to easily toggle between read-only and read/write modes.

Note: This is a Quick Start Guide only. The comprehensive user manual can be downloaded from our website at: <https://istorage-uk.com/product-documentation/>

1. How to use the Flash Blu30 on Windows, macOS, and Linux

Getting Started:

1. Start up your computer and boot into Windows, macOS, or Linux.
2. Plug the Kanguru Flash Blu30 into an available USB port.
3. Your operating system will automatically recognize the drive.

Windows: The system may briefly install drivers the first time you use the device. Once installed, the drive will appear in File Explorer under this PC as a removable storage device.

macOS: The drive will mount automatically and appear on your desktop and in Finder under Locations.

Linux: Most modern distributions will detect the drive automatically, and it will appear in your file manager under Devices. If not, it may need to be mounted manually.

Once the drive appears, you can begin transferring, saving, or opening files as with any standard storage device.

How to Safely Remove the Flash Blu30

To lock the drive, safely eject the Flash Blu30 from your operating system and then unplug from the USB port. If data is being written to the drive, ejecting the drive will result in incomplete data transfer and possible data corruption.

2. How to set the Flash Blu30 as Read-Only

The Flash Blu30 features a built-in physical write-protect (Read-Only) toggle switch located on the side of the device that provides an extra layer of security by allowing users to easily toggle between Read-Only and Read/Write modes. This simple yet powerful function safeguards data from accidental deletion, modification and malware while ensuring maximum flexibility.

How to set the Flash Blu30 as Read-Only:

1. Locate the toggle switch on the side of the device.
2. The **Read/Write** mode is with the toggle switch in the '**UP**' position indicated by an unlocked padlock (🔓).
3. To set the Flash Blu30 as **Read-Only** flip the toggle switch to the '**DOWN**' position.